




Kodak EasyShare M2008 Device Casing Replacement

How to remove the casing from your device to perform various repairs.

Written By: Kyanna

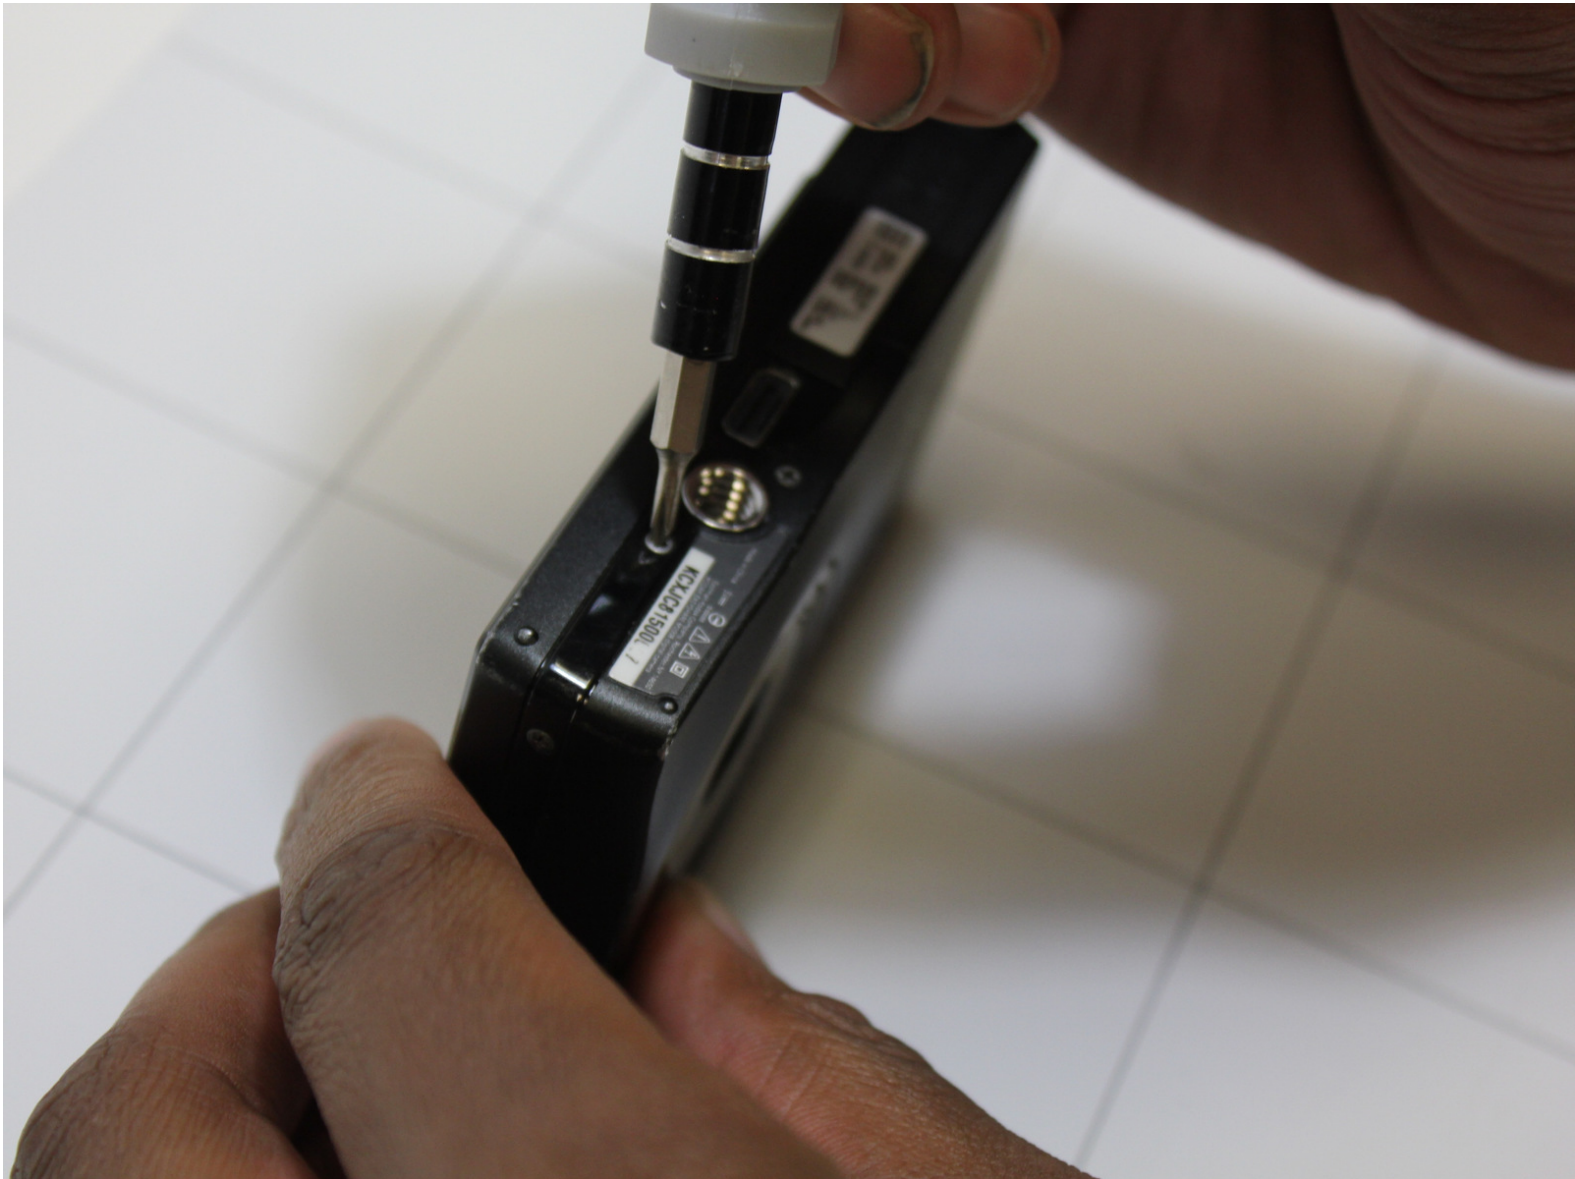



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Place thumb firmly on battery cover.
- Slide thumb right, the cover should follow and pop up.


Step 2

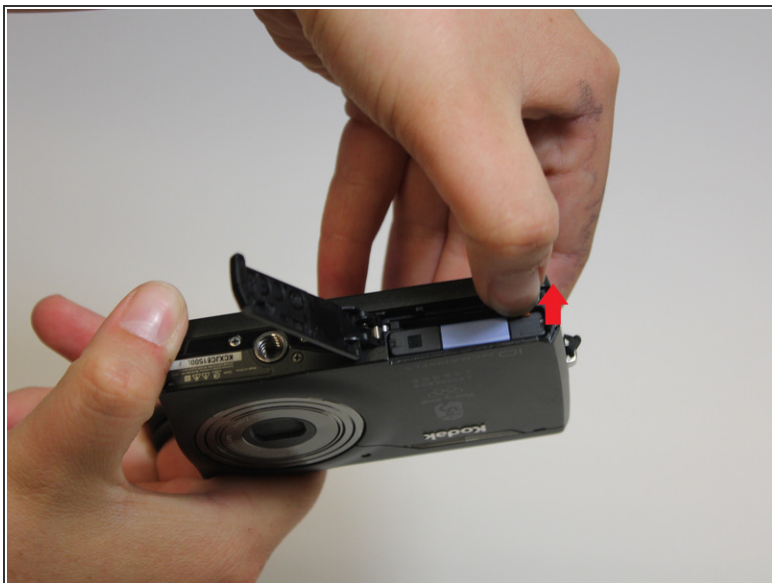



- Place thumb on orange tab and pull back towards screen.
- The battery should pop up.
- Gently lift battery out.

Step 3 — Device Casing



- Remove screws from along outer edge of casing.
- There are 6 screws in total.
-  Righty tighty, lefty loosey!

Step 4

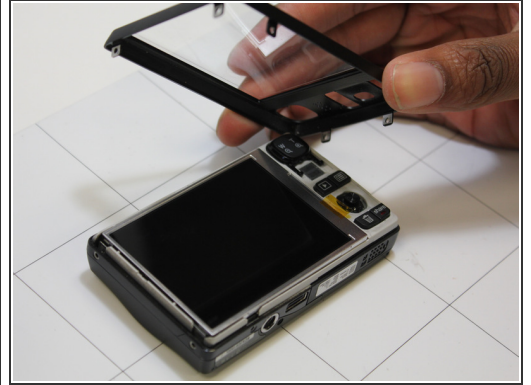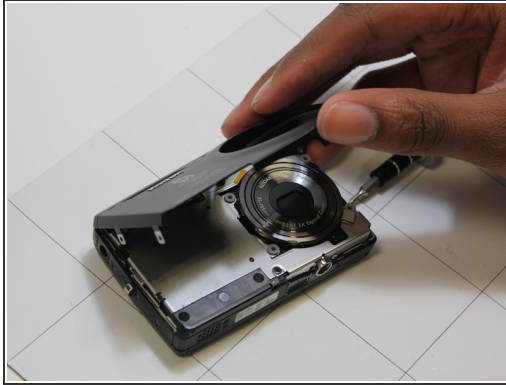

- Gently lift off front and back casing.

Step 5



- Remove screws along side.
- Gently peel off side casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:10:45 PM.